



Motorised Curtain Track




BEFORE YOU INSTALL ANYTHING

Please ensure the number of carriers/runners match the number of hooks on the curtain.

Adding or removing carriers/runners is not possible once the track is installed.

Please check you have

- Motor
- Brackets
- Power cable
- Remote control (Gen 2 required for setting up)
- Gen 3 remote & Dongle (If required)

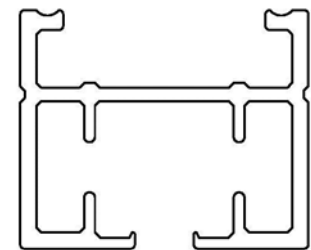

Section through track

Important Note: The Motolux Motorised Curtain track from Blindware can be used with the Gen 2 Remote controls as is, or with the new Gen 3 remote controls via a plug in “dongle”.

The Dongle must not be plugged in whilst setting the motors up.

The curtain track motor will emit a long beep once powered up.

Note, at any time if the receiver receives no signal within 30 seconds, it will exit the mode it is currently in.

To Pair the Motor and the remote

1. Using a paperclip or similar, press briefly the programming button in the bottom of the motor to wake up the receiver and go into pairing mode. The motor will emit two beeps.
2. Within 30 seconds, select the channel required on the remote (if applicable) and press the stop (middle) button. The motor will emit two short beeps signalling that it has been paired.
3. To add extra channels, select the required channel and press the stop (middle) button.
4. To exit pairing mode, press the up and down buttons simultaneously. The motor will emit one long beep.



Motorised Curtain Track

Note—The 'UP' button should be used as 'OPEN', and the 'DOWN' button should be used to 'CLOSE'

To Change direction

1. Press and hold the left button on the remote for 3 seconds. The motor will emit two beeps.
2. Press the UP and DOWN button simultaneously until the motor emits a long beep signifying the direction has been changed.

To set Limits

1. Using a paperclip or similar, press the programming button found on the back of the remote control for 5 seconds, to enter programming mode. The motor will emit two short, sharp beeps.
2. Within 30 seconds, press the down (close) button on the remote control. The master carrier will proceed until it hits a solid obstacle, i.e. the end limit or the other master carrier for a centre opening system. The motor will emit a beep signalling that the limit is set.
3. Press the Up (open) button on the remote control. The master carrier will proceed until it hits a solid obstacle, i.e. the end limit. The motor will emit a long beep signalling that the limits are set.

To Adjust the Limits

1. Press the 'OPEN' (UP) or 'CLOSE' (DOWN) button to go to the existing fully open or fully closed limit to be adjusted.
2. Using a paperclip or similar, press the programming button found on the back of the remote control for 5 seconds, to enter programming mode. The motor will emit two short, sharp beeps.
3. Press the 'STOP' (MIDDLE) button briefly. The motor will emit a beep
4. Move to the new limit.
 - A. To store a new fully open limit, press and hold the LEFT button for 5 seconds.
 - B. To store a new fully closed limit, press and hold the RIGHT button for 5 seconds.
 - C. The motor will emit a beep signalling the new limit is stored
5. Press the UP and DOWN button simultaneously to exit programming mode. The motor emits a long beep.

To Set an Intermediate position

1. Press the 'OPEN' (UP) or 'CLOSE' (DOWN) button to go to the desired intermediate position
2. Using a paperclip or similar, press the programming button found on the back of the remote control for 5 seconds, to enter programming mode. The motor will emit two short, sharp beeps.
3. Press the 'STOP' (MIDDLE) button briefly. The motor will emit a beep.
4. Adjust the position if required, otherwise press and hold the STOP button for 5 seconds. The motor will emit a beep signalling the intermediate position is stored.
5. Press the UP and DOWN button simultaneously to exit programming mode. The motor emits a long beep.



Motorised Curtain Track

Resetting

- To **delete** the stored **channels**—press and hold the program button on the motor for approx. 5 seconds. The motor will emit two beeps—All channels are deleted.
- To **delete both limits and channels**—press and hold the program button on the motor for approx. 10 seconds. The motor will emit two beeps, **Keep the button pressed** until the second beep — The motor is reset.

Installing the Gen 3 Dongle and remote

The NEW Generation 3 remotes controls from Motolux (shown) are modern and stylish and will fit well in any home.

To make them work with the current range of curtain tracks, an additional unit called a Dongle is required.

The Dongle simply plugs into the two ports on the bottom of the curtain track motor.

To Pair the Dongle and the Gen 3 remote


1. Using a paperclip or similar, press briefly the programming button in the Dongle to wake up the unit and go into pairing mode.
2. Within 30 seconds, select the channel required on the remote (if applicable) and press the stop (middle) button. The motor will emit a long beep signalling that it has been paired.




Automation System control

The Motolux Curtain track motor can be easily controlled by Automation systems where required.

This diagram shows the dry contact wiring required by the automation installer.

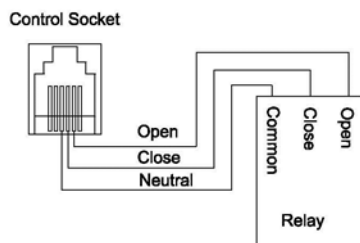

Automation system control

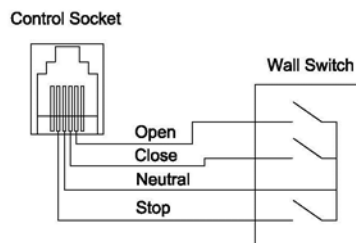

Wall Switch control