



Remote Controls

The Motolux Multi Channel remote controls come with 11 channels available, although only 6 are unlocked

To Lock or unlock channels on a multi channel remote control

1. Press briefly the setting button found on the back of the remote control. The number 1 will light up blue and stay lit.
2. Use the left/right selection buttons to scroll through the channels from 1 to 11. (channel 7 will be lights 1 & 2 together. Channel 8 will be 1 & 2 & 3 together and so on.
3. Press the STOP (middle) button to unhide or hide a channel
4. Press briefly the setting button found on the back of the remote control to exit the setting mode.

