




25mm DC Tubular Motor Programming Instructions.

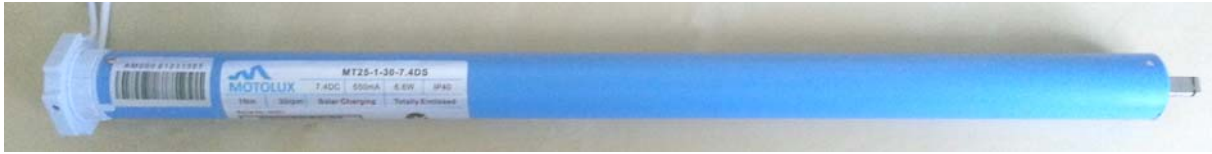

To Pair the motor and a Remote/Channel

- ⇒ Using a paperclip or similar, press briefly the programming button in the head of the motor to wake the motor up. *(The motor will jog)*
- ⇒ Select the channel required on the remote (if applicable) and press the UP (top) button **within 10 seconds**.
(The motor will jog)

To change the rotation direction

- ⇒ Press the STOP (middle) button of the programmed remote/channel for 5 seconds *(The motor will jog)*
- ⇒ press the DOWN (bottom) button **within 10 seconds**. *(The motor will jog)*

To set Limits

Note—it is possible to set up to 6 positions including top and bottom. An up/down command will send the motor to the next limit in that direction. To go straight to the top or bottom limit, double press (slowly) the up/down button.

- ⇒ Using a paperclip or similar, press the programming button found on the back of the remote control for **three** second to enter limit setting mode. *(The motor will jog)*
- ⇒ *Note : if there is no action within 30 seconds, the motor will exit limit setting mode.*
- ⇒ Press UP or DOWN to move the blind to the desired top or bottom limit.
- ⇒ Press the programming button on the back of the remote control for **three** second to store the limit. *(The motor will jog)*
- ⇒ Repeat this procedure for all other desired limit/stop positions.

To adjust a Limit

- ⇒ Move the blind to the limit to be adjusted
- ⇒ Press the programming button found on the back of the remote control for **three** second to enter limit setting mode. *(The motor will jog)*
- ⇒ *Note : if there is no action within 30 seconds, the motor will exit limit setting mode.*
- ⇒ Press UP or DOWN to move the blind to the desired new position.
- ⇒ Press the programming button on the back of the remote control for **three** second to store the limit. *(The motor will jog)*



25mm DC Tubular Motor Programming Instructions.



To ADD a new Remote or Channel

- ⇒ Using a remote or channel ALREADY PROGRAMMED to the motor, wake the motor up by pressing the STOP (middle) button for 5 seconds. *(The motor will jog)*
- ⇒ Press the UP button on the NEW remote/channel **within 10 seconds**. *(The motor will jog)*

To DELETE a Remote or Channel

- ⇒ On the remote or channel to be deleted, wake the motor up by pressing the STOP (middle) button for 5 seconds. *(The motor will jog)*
- ⇒ Using a paperclip or similar, **within 10 seconds** press the programming button on the back of the remote control for **three** second. *(The motor will jog)*

To DELETE a Limit

- ⇒ Move the blind to the limit to be deleted
- ⇒ Press the programming button found on the back of the remote control for SEVEN seconds to enter limit setting mode. *(The motor will jog)*
- ⇒ **NOTE:** *The motor will jog straight away, keep the button depressed until the motor jogs again after 7 secs.*

To switch from Automatic movement to manual movement *(or vice versa)*

- ⇒ Using a remote or channel ALREADY PROGRAMMED to the motor, wake the motor up by pressing the STOP (middle) button for 5 seconds. *(The motor will jog)*
- ⇒ **Within 10 seconds** press the STOP button briefly. *(The motor will jog)*

To return to factory mode

- ⇒ On the motor, press the program button for SEVEN seconds.
- ⇒ **NOTE:** *The motor will jog straight away, keep the button depressed until the motor jogs again after 7 secs.*
- ⇒ Alternatively,
- ⇒ On the Remote, wake the motor up by pressing the STOP (middle) button for 5 seconds. *(The motor will jog)*
- ⇒ Press the **BACK button on the back of the remote control** for more than SEVEN seconds.
- ⇒ **NOTE:** *The motor will jog straight away, keep the button depressed until the motor jogs twice after 7–10 secs.*